



金洋實業有限公司

KAM YEUNG COMPANY LIMITED

Solar Brand Remote Control : Open & Close Curtain Track, Electromagnetic Clutch,
Guaranteed DIY Installation,
Roller Blind, Vertical Blind, Venetian Blind & Skylight Shade

Your Ref:






 
Our Ref:

Date, 28th Aug 2008.



 
 

Electronic Remote Control Venetian Blind (New Version)

Operation Instruction:

 


 
 
 
 
(1) Specification for Wall Mount Control Board.

-  is a button of moving up and stop.
-  is a button of moving down and stop.
-  is a button of swinging left and stop.
-  is a button of swinging right and stop.
- A  is a button of setting for the blind moving to the downward limited and upward limited position.
- B  is a button of confirming for the blind moving to the downward limited and upward limited position.

(2) The Setting of Downward Limited and Upward Limited Position.

- You **MUST** set the downward position first.
- Press A  button for 3 seconds till the **red** light flush and release the button.
- Press  button, the blind will go down till to the desired position and press the same button again to stop the blind. Press B  button to confirm the downward limited position.
- Press  button, the blind will go up till to the desired position and press the same button again to stop the blind. Press B  button to confirm the upward limited position. The **red** light will change to **green** light and stop to flush.

(3) To Increase / Decrease the Power of Motor for Heavy / Light Slats.

- Press B  button for 6 seconds, you will hear a sound **Di** and **red** light flush. Continuously press the same button for 3 seconds (total 9 seconds), a sound **Di** again, the **red** light stop flush.
- Press  button to commence the setting. Press A  button to increase the power of motor (for heavy slats). Press B  button to decrease the power of motor (for light slats).
- Press  button to confirm this setting.
- Press A  or B  of the button 80 times to the maximum or minimum point. To the end, there will be the sound **Di-Di-Di**.
- In general situation, the above setting is already preset by the factory.

< P. 1 >



金洋實業有限公司

KAM YEUNG COMPANY LIMITED

Solar Brand Remote Control : Open & Close Curtain Track, Electromagnetic Clutch,
Guaranteed DIY Installation,
Roller Blind, Vertical Blind, Venetian Blind & Skylight Shade

Your Ref:

Our Ref:

Date, 28th Aug 2008.

Electronic Remote Control Venetian Blind (New Version)

Operation Instruction:

(4) Code Can Be Changed (for Remote Controller)

- Press the right hand button on the back of the remote controller 3 seconds till the indicated light flushes one time. That means, the code of this remote controller is now changed. The combination of codes are 250 and by random.

(5) Code Can Be Changed (for Wall Mount Control Board)

- Press B⊙ button of wall mount control board for 9 seconds totally.
- Press ▼ to commence the setting.
- Point the remote controller to the blind (infrared receiver) and press ▲ button of remote controller, you will hear a sound Di. The code of wall mount control board is now changed to match the remote controller.

(6) Use the Remote Controller to set the Downward / Upward Limited Position.

- Point the remote controller to the blind (infrared receiver).
- Press the left hand button on the back of remote controller for 3 seconds till the indicated light flushes one time.
- Press ▼ button, the blind will go down till to the desired position and press the same button again to stop the blind. Press ⌚ button to confirm the downward limited position.
- Press ▲ button, the blind will go up till to the desired position and press the same button again to stop the blind. Press ⌚ button to confirm the upward limited position. The red light will change to green light and stop to flush.

Caution : Once you need to connect the power to the motor, please plug the 6 pin cable to 6 pin socket first and then the power pin to the power socket. The action should be gentle and keep the movement in level. On the other hand, if you want to disconnect the power, please unplug the power pin first and then the 6 pin cable. It is because the 6 pin plug and socket are rather delicate. It is easy to cause a short circuit. If the power is there, the transistor may burn out.

Remark: During long periods where the remote controller is not used, remove the batteries to prevent damage from battery leakage.

< P. 2 >

ADDRESS : FLAT C, 2/FL., BLOCK 3, GOLDEN DRAGON INDUSTRIAL CENTRE,
172-180 TAI LIN PAI ROAD, KWAI CHUNG, N. T., KOWLOON, HONG KONG
WEBSITE : <http://www.kamyeung.com> E-MAIL: kamyeung1980@yahoo.com.hk

TEL: 852-2428 3296, 2424 7485
FAX: 852-2480 3346